

Pure Acoustics®

User`s Guide



SBAR-51

Sound Bar and Docking Station



iPod
nano
1st
generation



iPod nano
2nd
generation
(aluminium)



iPod mini
1st generation



iPhone
3 G
8GB 16GB



iPod
4th
generation
(color display)



iPod
5th
generation
(video)



iPod nano
3rd generation (video)
4GB 8GB



iPod classic
80GB 160GB



iPod touch
8GB 16GB
32GB

Please read the following instructions carefully before connecting, operating or adjusting this product.
Please keep this manual in a convenient place for future reference.

Contents

Important Safety Instructions	3
Warnings and Precautions	3
Overview	4
Features	4
Package Contents	4
Front View	5
Back View	6
Remote Control	7
Setup.....	8
Connect the FM Antenna	8
Connect External Devices.....	8
Connect Power	9
Install Remote Control Batteries	10
Setting the Clock	10
Basic Operation.....	11
FM Radio.....	11
Storing Stations.....	11
Recalling Station	11
Playing an iPod / iPhone.....	11
Dock and Charge your iPod / iPhone	11
Playing an iPod / iPhone	12
Audio Settings.....	12
3D Sound	12
Adjusting Bass and Treble.....	12
Display Brightness	12
Select Source.....	13
Additional Information	13
Troubleshooting	13
Specifications	13
FCC Information	14
Limited Warranty	14

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Warnings and Precautions

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT PLUG.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Using this product near fluorescent lighting may cause interference with of the remote. If the product is displaying erratic behavior, move away from any fluorescent lighting.

The product shall not be exposed to dripping or splashing and that no objects filled with liquids such as vases, shall be placed on apparatus.

The mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the product shall be disconnected from the mains socket outlet completely.

Overview

Features

- Powerful 50W RMS system enhances your music listening experience
- iPod Drawer conveniently opens when needed and hidden when not in use
- Plays and charges most dockable iPods

Package Contents



Soundbar



Remote Control



AC Adapter



FM Antenna



3.5mm Cable



 
RCA Cable



Video Cable



**iPod™ / iPhone™
Dock Adapters (5)**




WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

	<p>This lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.</p>
	<p>The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.</p>

 Front View

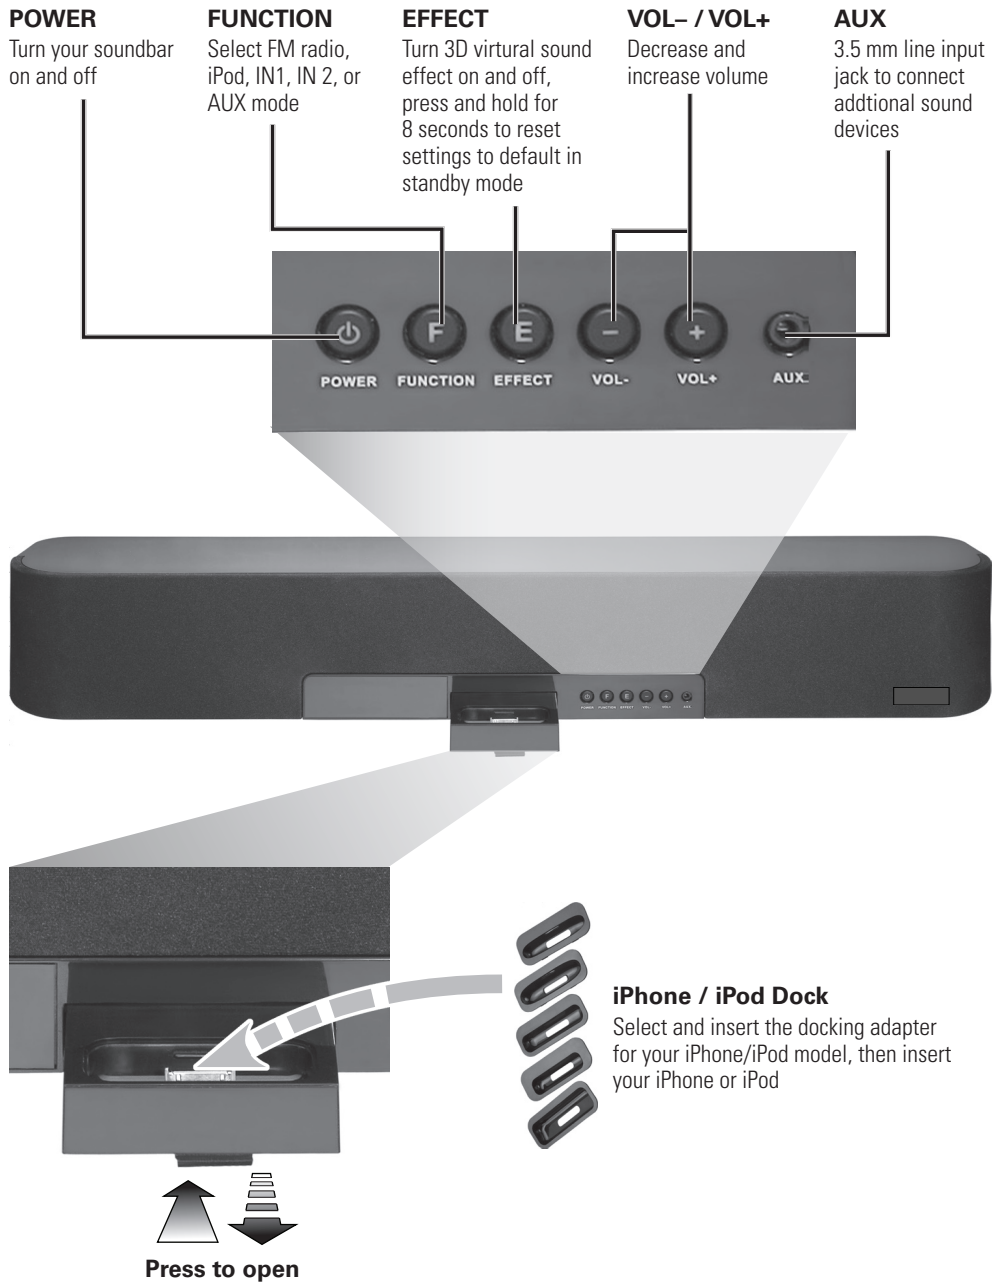

Back View

 
FM ANT
Connect FM antenna

SUB OUT
Connect an external subwoofer

STEREO RCA INPUT
Connect to the audio output jacks on your external device (TV, DVD, game system, etc.)

VIDEO OUT
Connect to the video output jacks on your external device

DC IN 15V
Connect supplied DC15V power cord

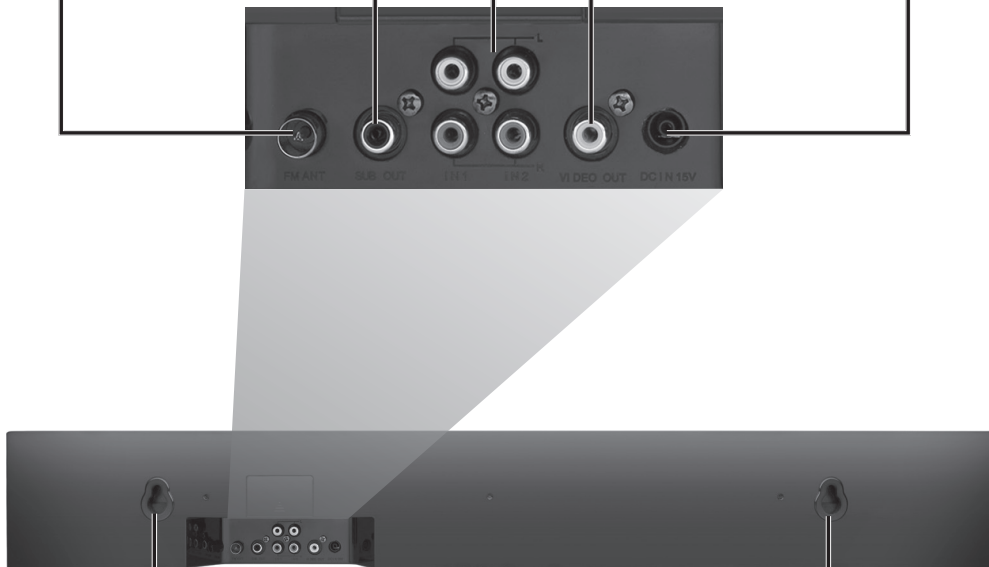

Mount your Speaker (Optional)

1. Use 2 screws (not supplied) with heads no bigger than the mount holes on your speaker.
2. Place the mount holes and slide down to secure the speaker.

Remote Control

MUTE – Turn sound on or off

EFFECT

Turn 3D virtual surround effect on or off

POWER – Turn the soundbar on or off.

FUNCTION – Select desired input mode

DISPLAY / TIME

Enter time setting mode, view current mode.

Number Buttons (0-9)

Input a radio station number.

VOL + / VOL -

Increase or decrease the volume

SUB + / SUB -

Increase or decrease subwoofer volume

TONE / DIMMER –

Adjust bass and treble levels, select display brightness.

MENU – Return to previous menu on a docked iPod.

ENTER – Make selections

◀▶/▶▶/▶▶

Navigate left and right through menus, play, pause, skip forward or skip backward in iPod mode.

▲▼

Navigate up and down through menus

REPEAT / ST

Select repeat options from a docked iPod, select stereo or mono sound in FM radio mode.

 
SHUFFLE – Play tracks from your iPod / iPhone in random order.



Setup

① Connect the FM Antenna


Plug the supplied FM antenna into the **FM ANT** jack.

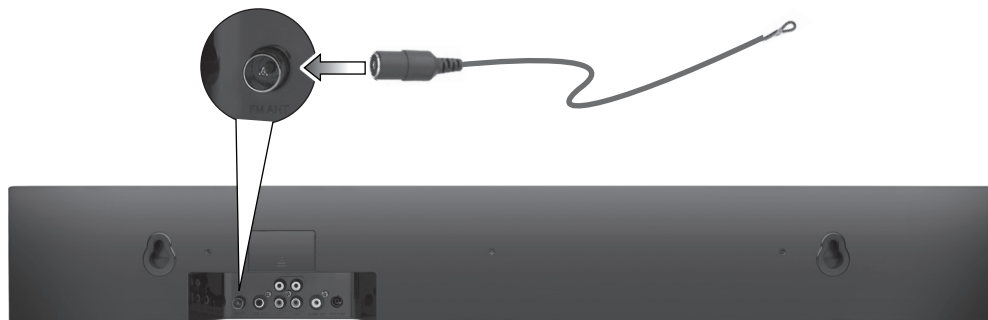

② Connect External Devices (Optional)


Subwoofer

 Connect an external subwoofer

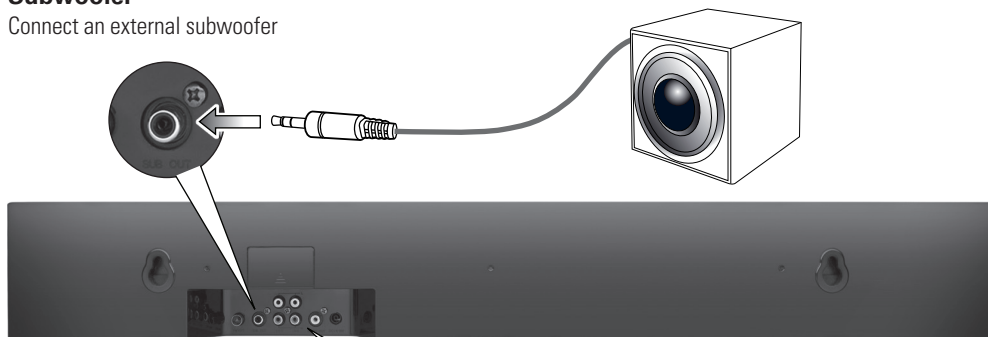


Audio Inputs

 Use an audio cable to connect each device's audio output jacks to the soundbar's audio jacks, **IN 1** or **IN 2**. Red jacks are for right audio, and white jacks are for left audio.

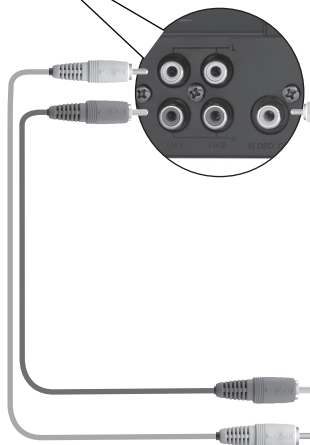


Video Outputs

 Use the video cable to connect each device's video input jack to the soundbar's **VIDEO OUT** jack.

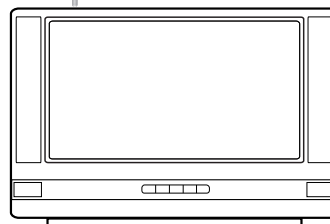


AUX

 Connect an audio device using the 3.5mm mini-phono cable, or a 3.5 mm mini phono to RCA cable (not included) into the **AUX** jack. Connect the other end into the audio output/headphone output on your audio device.

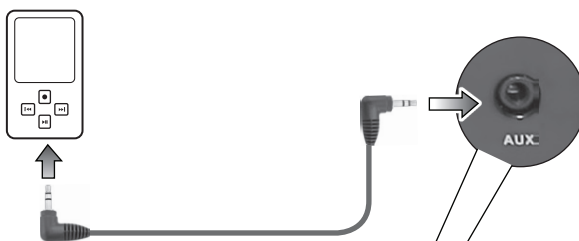


Setup

 ③ Connect Power

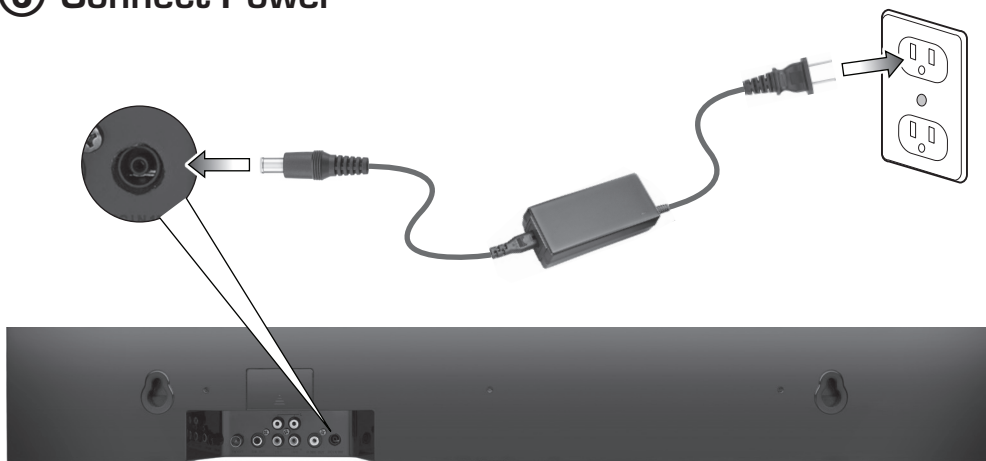

④ Install Remote Control Batteries

 1. Press the tab to remove the battery cover.
2. Insert two AAA batteries (not supplied) as indicated by the polarity symbols (+ and -) marked on the remote control.
3. Replace the battery cover.

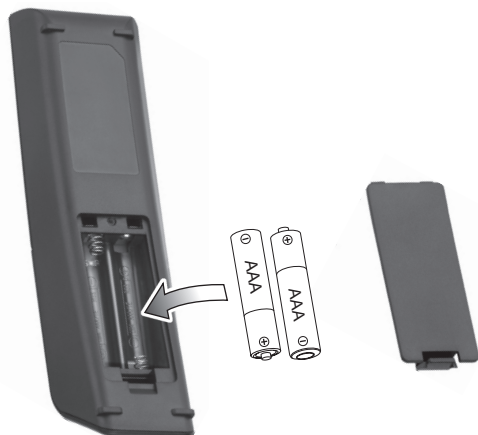

Battery Notes:

- *Dispose of batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.*
- *If you do not plan to use the remote control for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.*

⑤ Setting the Clock

1. In standby mode, press **DISPLAY/TIME** on the remote control. The first hour digit flashes.
2. Press **▲** or **▼** to adjust each hour and minutes digits.
3. Press **◀** or **▶** to move to the hour or minutes digit you want to adjust.
4. Press **DISPLAY/TIME** to save your settings.
5. Press **REPEAT/ST** on the remote control to select 12 h or 24 h time format.



12:00^{AM}

Basic Operation

FM Radio

1. Press **POWER** to turn on the unit.
2. Press **FUNCTION** to select FM mode. *FM* displays.
3. Press **◀** or **▶** to tune down or up to find a station.
Press and hold **◀** or **▶** to auto search stations.
4. Press **VOL +** or **VOL -** to adjust the volume.
5. Press **REPEAT/ST** on the remote control to select stereo or mono mode.



Storing Stations

1. Tune to the desired station.
2. Press **ENTER**. The program location flashes.
3. Press **0** through **9** on the remote control to select a memory location (total of 10 preset stations are available).
4. Press **ENTER** to store the station.



Recalling Station

1. To recall stored stations, press number **0** through **9** to access the desired memory location.

iPod/iPhone

Dock and Charge

1. Select the docking adapter that fits your iPod/iPhone model.

Refer to the number marked on the adapters:


Adapter No.		Compatible Models
10		Video 60G/80G & Classic 10G
13		Nano 3G
14		Touch 1G
15		iPhone 3G
16		Touch 2G

2. Snap the adapter into the docking station.
3. Plug your iPod / iPhone into the adapter.

Playing Tracks

1. Dock your iPod / iPhone.
2. Press **POWER** to turn on the soundbar.
3. Press **FUNCTION** to select iPod mode. *IPOD* displays.
4. Press **▶||** to start and pause iPod / iPhone playback.
Press **◀** or **▶** to skip to the previous track or to the next track.
Press and hold **◀** or **▶** to search backwards or forwards in the current track.
Press **REPEAT/ST** to select repeat the current track, repeat album or playlist or repeat off.
Press **SHUFFLE** to play tracks in an album randomly in your iPod/iPhone.
Press **MENU** to access the docked iPod menu.
Press **▲** or **▼** to navigate iPod / iPhone menus.

IPOD

 **Note:** Your iPod / iPhone must be updated with the latest firmware from Apple in order for it to work properly with your sound bar.

Audio Settings

3D Sound

Press **EFFECTS** to turn 3D sound on and off.

3D ON

Adjusting Bass and Treble

1. Press **TONE/DIMMER** on the remote control until the display shows *BASS* or *TREB*.
2. Press **VOL +** or **VOL -** to adjust to the desired level.

BASS 00 dB

Display Brightness

1. Press **TONE/DIMMER** on the remote control until the display shows *DIMMER* level.
2. Press **VOL +** or **VOL -** to adjust to the display brightness to the desired level.

DIMMER2